

**REVISION HISTORY**

<b>Rev No.</b>	<b>Issue Date</b>	<b>Reason for Issue</b>
v1.0	31/03/2020	First issue

**TABLE OF CONTENTS**

<b>INTRODUCTION</b>	<b>3</b>
<b>HAULING</b>	<b>3</b>
<b>LAUNCHING</b>	<b>4</b>


## **1. INTRODUCTION**

This manual explains in detail with the aid of pictures how to launch and haul in/out the Persico 69F. You are invited to read it carefully and familiarise yourself with the boat before sailing.

## **2. HAULING**

- The rigged boat can be easily launched with any kind of crane.


- The 3 attachment points on the boat are the bow soft shackle in the forestay ring and the 2 aft rack posts.
- The “balance point” to have the proper boat pitch (bow down to avoid mast touching the crane) is on top of the boom kink.
- As soon as the bow hits the water, start pulling the bow in order to avoid the crane touching the mast.

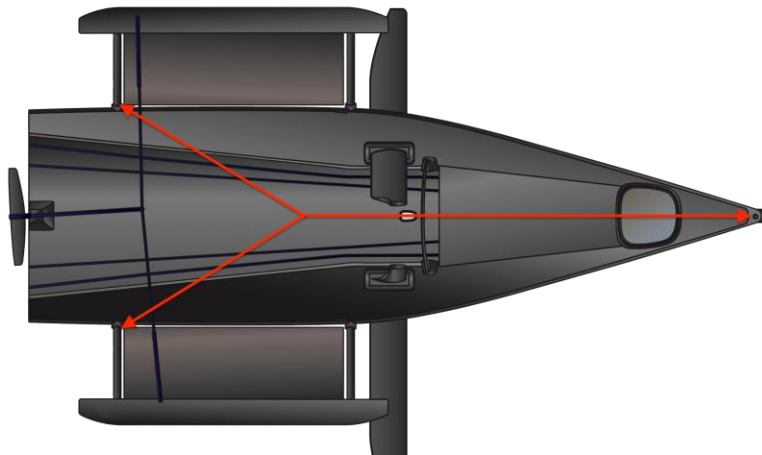

### 3. LAUNCHING

- The rigged boat can be easily launched from a slipway with the supplied trolley.
- When the boat is floating on the water and the trolley is removed, depending on the weather conditions it is possible to use the supplied telescopic paddles to go out. Telescopic paddles are positioned in the forward pocket of the rack trampolines.

- It is suggested to drop both foils down asap in order to gain stability in the boat and avoid drifting before setting the daggerboard.
- Note that to install the rudder may take some time and that in the meantime it is possible to lose the control of the boat. Therefore, don't carry out such operation in dangerous zones or close to any obstructions.

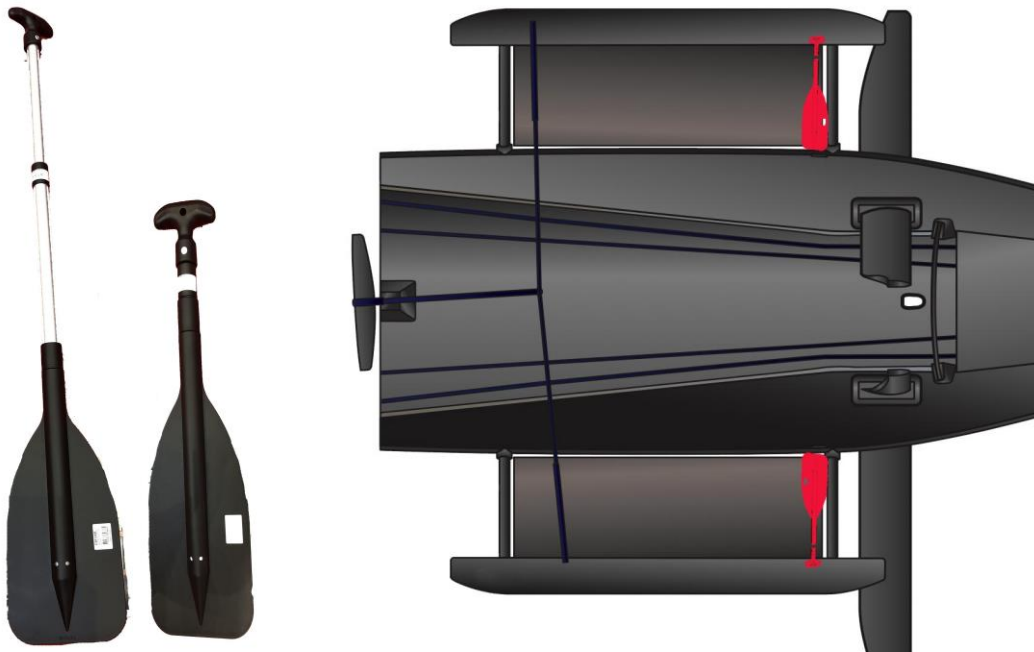

**WARNING:** It is generally strongly suggested to drop down both foils when hoisting and dropping the mainsail in order to avoid damaging it with the foils trailing edges that are pretty sharp!